


Plumbing Instructions

Be sure electrical wiring to disposer is disconnected from power. Be sure circuit breakers are turned off before installing. And be sure to wear safety glasses.



1. Remove the bracket and seal,

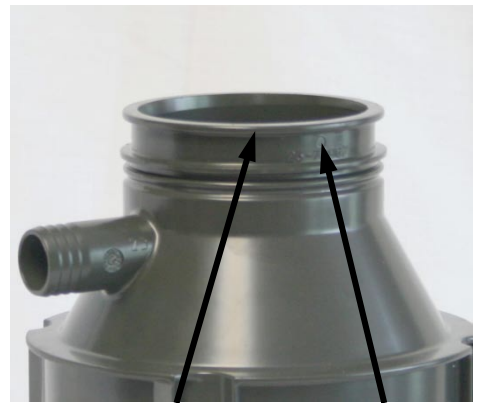

2. Revealing the lip.



3. Slip the lip into the rubber mount*.



4. Support disposer with one hand and attach clamp.



5. Slip the strainer base into the rubber mount.



6. Attach clamp.

** For added leverage, place the base of the disposal in the palm of your hand and put that elbow on the floor of the cabinet. The other hand guides the throat and lip into the rubber mounting seal.*

After the disposal is attached to the Affluence™ SeamlessSink mounting seal, follow the disposer manufacturer's instructions and safety precautions for attaching electrical power and plumbing and disposer operation.

Affluence™ Seamless Sink is ready for drain plumbing (not included) to be attached.

There are 4 disposer brackets* on the US market.

3 of those disposers have the same lip when you remove their brackets.



Slip the lip into the the rubber mount.



Support disposer with one hand and attach clamp.

** Affluence™ SeamlessSink mounting seal is not designed to fit Batch Feed and Kitchen Aid disposers.*

The other disposer mount uses an adapter (not included).

If adapter is needed, contact us and we will ship at no charge.



Notice the adapter's lip.



Adapter installed. Notice lip.

The lip slips into the Seamless Sink's mounting seal and is attached with a clamp as above.

If any questions, call us at 1-513-277-0491, email us at sales@seamlessink.com or visit our web site at www.SeamlessSink.com